

Joist / Truss Size	MiTek Stock No.	Ref. No.	Steel Gauge	Dimensions (in)			Fastener Schedule ³				DF/SP				S-P-F			
				W	H	A	Header		Truss ²		Allowable Loads (Lbs.) ³				Allowable Loads (Lbs.) ³			
							Qty	Type	Qty	Type	Floor	Roof		Uplift ¹	Floor	Roof		Uplift ¹
												100%	115%			125%	160%	
2 x 6 - 8	MUS26	MUS26	18	1-9/16	5-1/16	1	6	10d	6	10d	1285	1475	1605	865	1190	1365	1475	760
	HUS26	HUS26	16	1-5/8	5-7/16	2	14	16d	6	16d	2760	3140	3400	2045	2430	2765	2990	1640
2 x 8 - 10	MUS28	MUS28	18	1-9/16	7-1/16	1	8	10d	8	10d	1710	1970	2140	1230	1585	1815	1965	1085
	HUS28	HUS28	16	1-5/8	7-3/16	2	22	16d	8	16d	4170	4745	5125	2990	3670	4035	4130	2410
2 x 10 - 12	HUS210	HUS210	16	1-5/8	9-3/16	2	30	16d	10	16d	5455	5825	6060	4110	4235	4565	4780	3410

1) Uplift loads have been increased 60% for wind or seismic loads; no further increase shall be permitted.

2) Nails must be driven at a 30° to 45° angle through joist or truss into header to achieve the table loads.

3) **NAILS:** 10d nails are 0.148" dia. x 3" long, 16d nails are 0.162" dia. x 3-1/2" long.