			Fastener Schedule <sup>4</sup>				DF/SP			
			Plate		Truss/		Allowable Loads (Lbs.) <sup>1</sup>			
							Without Gap <sup>2</sup>		With 1-1/4" Gap <sup>3</sup>	
MiTek		Steel	Тор	Side			F1 <sup>5</sup>	F2	F1 <sup>5</sup>	F2
Stock No.	Ref. No.	Gauge	Qty	Qty	Qty	Туре	160%	160%	160%	160%
HTC4	HTC4	16	2	4	3	10d x 1-1/2	255	525	55	295

- 1) Loads have been increased 60% for wind or seismic loads; no further increase shall be permitted.
- 2) Truss/Rafter must be bearing on top plate to achieve the allowable loads under "Without Gap".
- When installed with maximum 1-1/4" space between truss/rafter and top plate, use loads under "With 1-1/4" Gap".
- 4) To achieve F1 loads in both directions, clips must be installed on both sides of the truss and nails staggered to avoid nail interference.
- 5) NAILS: 10d x 1-1/2 nails are 0.148" dia. x 1-1/2" long.