





Step 1: Install acute side top and/or face header nails.

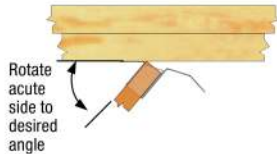


Step 2: Utilizing a piece of scrap fastened to the hanger on the obtuse side, bend the hanger to the desired angle.

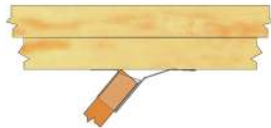

Step 3: Bend the obtuse side of hanger back toward the header until the flange lies flat against the header, and install header top and/or face nails as noted below.

Align back edge of carried member with the slotted holes on the acute side

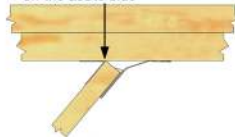

Step 4: Install carried truss and all required nails fasteners working from the bottom up.