


TMP Rafter Connector

Installation Instructions

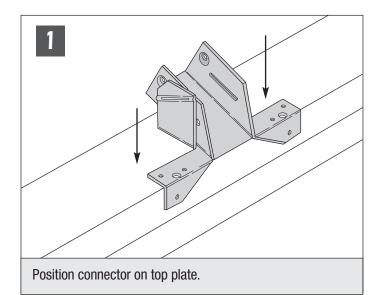


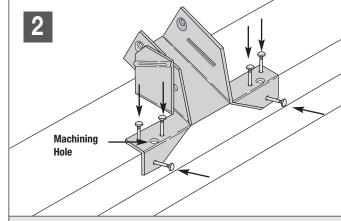

Fasten connector to outward side of top plate with (6) 10d (0.148" x 3") nails. Do not drive nails through large machining holes.

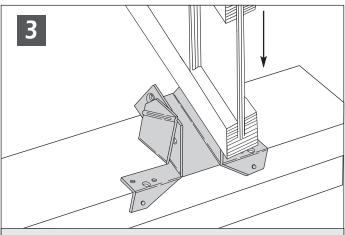

Insert rafter into rafter pocket. Use downward pressure to fully seat the rafter. Adjust rafter and pocket to correct pitch.

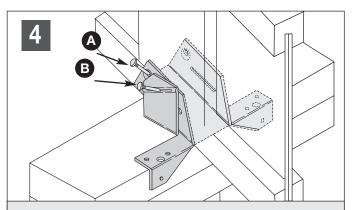

Fasten rafter to connector with (4) 10d (0.148") \times 1-1/2" nails in rafter pocket; (A) - 2 driven at a downward angle through dimpled nailing guides and (B) - 2 driven through opposing slots.