

MiTek[®]


TMPH Rafter Connector Installation Instructions

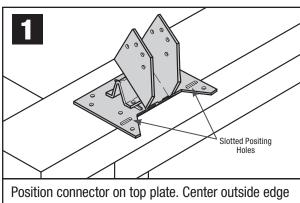


of top plate in slotted positioning holes.

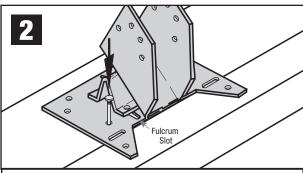


Fasten connector to the top of top plate with (6) 10d (0.148" x 3") nails. **NOTE:** Do not drive nails through fulcrum slots yet.

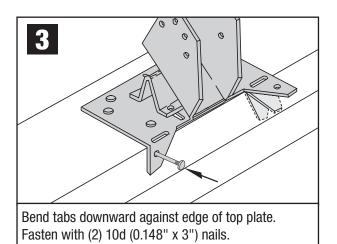

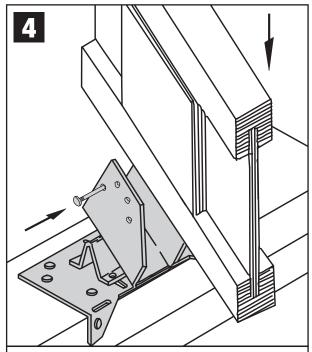

Insert rafter into Rafter Pocket. Use downward pressure to fully seat the rafter. Adjust rafter and pocket to correct pitch. Fasten rafter to rafter pocket with (8) 10d (0.148") x 1-1/2" nails.

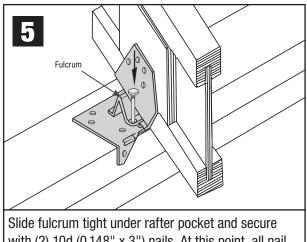

with (2) 10d (0.148" x 3") nails. At this point, all nail holes should be filled.

Customer Service & Technical Assistance Phone: 1-800-328-5934 • Fax: 1-952-898-8605 • Email: customerservice@mii.com